



NAV-INLEX

VIDEO INPUT
ALL LEXUS (separate navi)

NAV TV (Europe) LTD



NAV TV (Europe) LTD

Distribution Centre
Unit 21B Vale Business Park
Llandow, Vale of Glamorgan
CF71 7PF

Telephone: + 44 (0)8445 783 783
Fax: + 44 (0)1446 77 22 47
technical@nav.tv

Disclaimer
NAV TV (Europe) Ltd is not liable for any incidental, consequential or indirect damages. In case of erratic behavior of the vehicle's electrical system please disconnect the NAV TV product and contact our technical support Team. NAV TV (Europe) Ltd does not assume liability for any diagnostic fees.

e11*72/245*95/54*3583*00
RoHS 2002/95/EC—2002/96/EC

LOCATION & REMOVAL

Ensure the vehicle is equipped with Navigation

All the plugs can be accessed at the Navigation computer which is located in the boot of most models



INSTALLATION

The following plugs are to be used

Locate the smaller white plug at the Navigation unit, remove it from the unit and insert it into the supplied harness.

Insert the supplied harness into the navigation unit, plug in and mount the interface and carry out other connections;

Other Connections

RED to 12v+ ignition / acc

BLACK to 12v- ground

BLUE to 12v+ to activate camera input

RED NOT USED



Note:

You can also pick up the power supplies at the navigation see below:

12v - heavy blue

Ground - heavy green

IGN - Light pink

You will have to use a relay as the IGN is low current.

OPERATING INSTRUCTIONS

The video input is auto video sensing, when your additional source is switched on the picture will override the navigation map picture. It will revert back to the navigation picture when your source is switched off.

The second input (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source or the navigation map when activated.

