


OPERATING INSTRUCTIONS

When the interface is fitted the “video in motion” feature will be permanently active, there is no procedure to activate or de-activate the feature.

To activate the new A/V source press the “MEDIA” button then the source button (shown below)



Then select “TV tuner” from the on screen list (shown below)

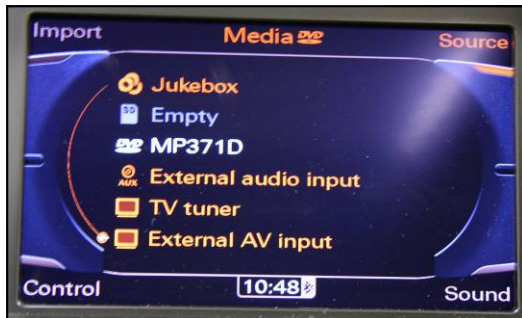

NOTE,

it is possible to select the new input via the “External AV input” and AV1 / AV2 menu, however this interface only allows 1 AV input



OPV-1A3G

VIDEO IN MOTION & AV INPUT

ALL AUDI 3G MMI

Without TV Tuner

NAV TV (Europe) LTD



NAV TV (Europe) LTD

Distribution Centre
Unit 21B Vale Business Park
Llandow, Vale of Glamorgan
CF71 7PF

Telephone: + 44 (0)8445 783 783

Fax: + 44 (0)1446 77 22 47

technical@nav.tv

technical@nav.tv

Disclaimer
NAV TV (Europe) Ltd is not liable for any incidental, consequential or indirect damages. In case of erratic behavior of the vehicle's electrical system please disconnect the NAV TV product and contact our technical support team. NAV TV (Europe) Ltd does not assume liability for any diagnostic fees.

e11*72/245*2004/104*4020*00
RoHS 2002/95/EC—2002/96/EC

LOCATION & REMOVAL

All connections are made at the DVD player Unit in the front centre or glove box of the vehicle




All units are removed with VW/AUDI radio removal tools. Removing the unit without the correct keys may cause damage and problems when re-fitting the unit.

INSTALLATION

Remove the optical cable from the unit, shown below (shown in Red circles below)

DVD PLAYER

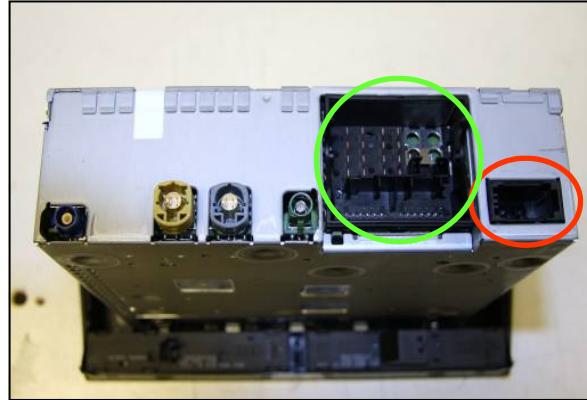

Next insert the supplied female optical cable into the factory harness optical plug.

Then insert one of the supplied male optical plugs into the CD Changer / DVD player.

Then insert the other male optical plug into the interface.

Using the power supply found in the factory power connector (shown in green circle above)

Connect RED to 12v+ Permanent

Connect BLACK to 12v- Ground

INSTALLATION

Connect the supplied video harness to the GREEN Fakra connector (shown in blue circle below)



Connect your video cables to the female YELLOW Phono.

Connect your audio cables to the female RED and WHITE Phono