



AV1RXh

AV INPUT

LEXUS RX400h 2008>

Without TV Tuner and with DVD
Changer



LOCATION & REMOVAL

Installation is made at the front screen and head unit.

To remove the front unit you need to first un-screw the gear knob, then remove the trim that surrounds the gear selector, next remove two bolts holding the DVD unit and remove. Then remove two bolts holding the screen unit and remove.




Once removed you may disconnect all plugs and remove the unit completely.

To remove the radio unit you will need to remove two screws holding the pocket below.

You can then remove two bolts above and two bolts below holding the radio.

Once removed you may disconnect all plugs and remove the unit completely.

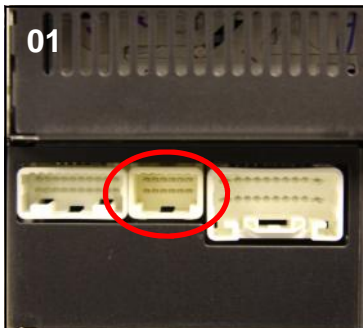


INSTALLATION

Video Input

The Video input is inserted at the **Blue 6 way socket** located on the DVD changer unit. The pins are inserted as follows;

Video signal -pin 3

 Video shield -pin 6



PICTURES SHOWN ARE WIRE SIDE OF PLUG

Audio Input


The Audio input is inserted at the **White 12 way plug** located in the centre of the DVD changer unit (labelled as **01** opposite) The pins are inserted as follows;

Left signal -pin 2

Left ground -pin 3

Right signal -pin 4

Right ground -pin 5

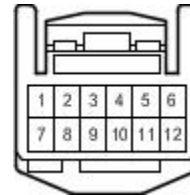

PICTURES SHOWN ARE WIRE SIDE OF PLUG

AV1RXh Interface

The **AV1RXh** interface is connected at the **White 12 way plug** (labelled as **01** opposite, and above)

The connections are as follows;

RED to **12v Acc**
BLACK to **12v- Ground**
BLUE to **PIN 10**
BLUE/WHITE to **PIN 9**

OPERATING INSTRUCTIONS

With the interface installed you will now have an **additional source in the menu via the “MODE” or “DISC-AUX” button**. The source name you have added can be chosen using the ‘dip switches’ inside the interface. Settings are as follows.

Note;

You cannot add a source that it already fitted to the vehicle.

1	2	3	4	Mode added
On	On	On	Off	DVD Changer
Off	On	On	Off	DVD Player
On	Off	On	Off	NAVIGATION

