


# OPERATING INSTRUCTIONS

When the factory monitor is displaying navigation supply 12V+ to the BLUE switch cables from the audio and video interface (e.g. connect to remote out from DVD) to switch audio and video to your new external source. The switch wire will then need to be deactivated when you revert back to any of the other functions if you wish to listen to the audio from another factory source.



## Note;

The RGB switch should be set to **RGBS**

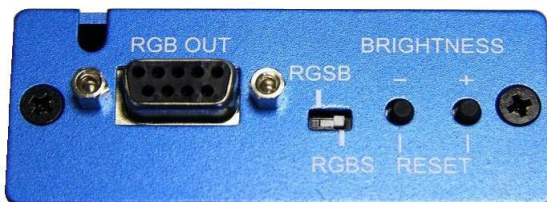

## OPV-1AST

A/V INPUT  
ASTON MARTIN



