



VIMCANMER5-M

VIDEO IN MOTION

MERCEDES C Class W204

With TV Tuner



LOCATION & REMOVAL

Installation is made at the front unit.

First remove the A/C vent by inserting a trim tool at the bottom and at the top behind the Rubber pads (1).

Next pull out and unplug the A/C vent (2).


Locate the two screws at the top of the Radio unit and remove (3).

Lastly slide the Radio locking pins upwards to release the Radio unit (4)



INSTALLATION

Remove the "QUADLOCK" connector (5) from the unit and plug it into the supplied harness, plug the supplied harness into the unit. Some additional plugs will need to be transferred to the supplied loom from the male factory connector e.g. the fibre optic plug and white plug (shown below with white arrows)

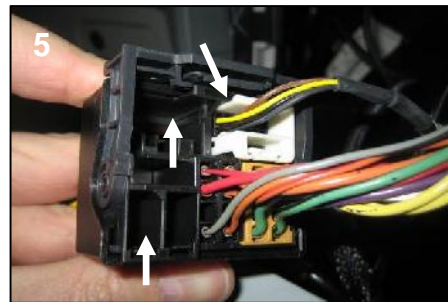

Purple/White (PIN5) = 500mA 12v+ ACC out




OPERATING INSTRUCTIONS

To activate and de-activate video in motion using steering wheel buttons;

Press and hold "return" button on the steering wheel for three seconds to activate "Video In Motion"

Repeat to de-activate "video In Motion"

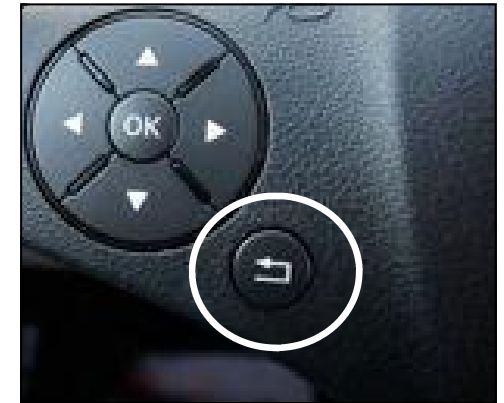

Note;

GPS navigation will not function when "video In Motion" is active.