

LOCATION & REMOVAL

Installation is made at the front unit for both VWAV3-CAM (CAN) and VWAV3-CAM (VIDEO) interfaces.

The unit is removed using 4 AUDI/VW removal keys.

Removing the unit without the correct keys may cause damage and problems when re-fitting the unit.



INSTALLATION

VWAV3-CAM (VIDEO)

Remove the **GREY** 32 way plug from the unit and insert it into the supplied **BLACK** 32 way female connector

Next insert the supplied NAVTV 32 pin **GREY** plug into the **GREY** socket on the Head Unit, see fig 001 & 002

Connect your Video lead to the **YELLOW** cable socket on the 12 way harness.

Connect your Audio leads to the **RED/WHITE** cable sockets, see fig 001

Connect the **RED** to 12v+ ignition/accessory

Connect the **BLACK** to 12v- Ground

Connect the **ORANGE** cable to a 12v+ reverse signal

Fig 001

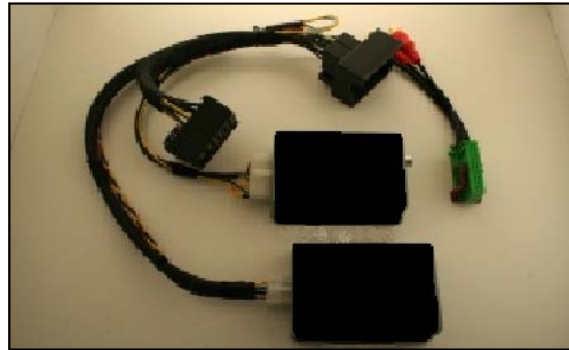


Fig 002



INSTALLATION

VWAV3-CAM (CAN)

Remove the "Quadlock" connector from the unit and plug it into the NAVTV harness, next plug the NAVTV harness into the unit.

Any additional plugs that are inserted into the car's "Quadlock" connector will have to be removed and inserted into the NAVTV "Quadlock" connector as shown in fig 004 below.

Fig 004

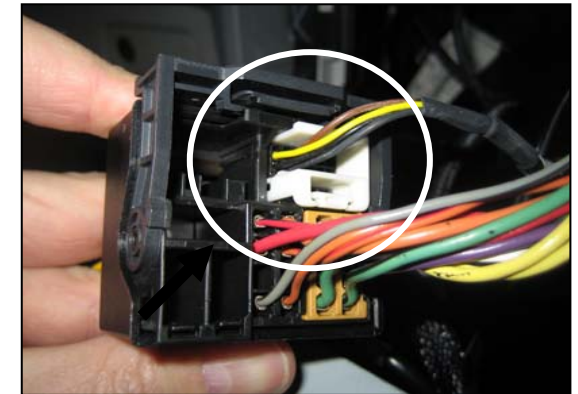


Fig 003

