

## OPERATING INSTRUCTIONS

VIDEO2 (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source (VIDEO1) or the navigation map when activated.

If VIDEO 1 is required you will need to CUT the ORANGE cable on the harness and add in an external switch. When the orange cable is broken the VIDEO 1 source will be activated. When re-connected the factory Navigation will be restored.



## NAV-INHON


VIDEO INPUT  
HONDA ACCORD / LEGEND  
Without TV Tuner

---



## LOCATION & REMOVAL

Ensure the vehicle is equipped with Navigation

All the plugs for can be accessed at the Navigation screen which is located in dash, or at navigation computer

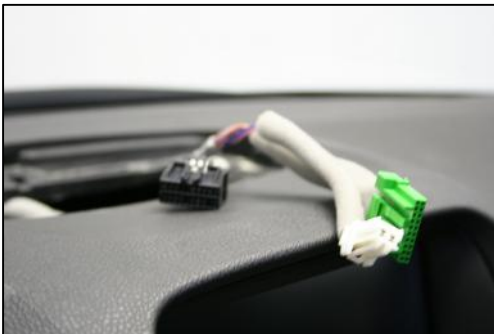

## INSTALLATION

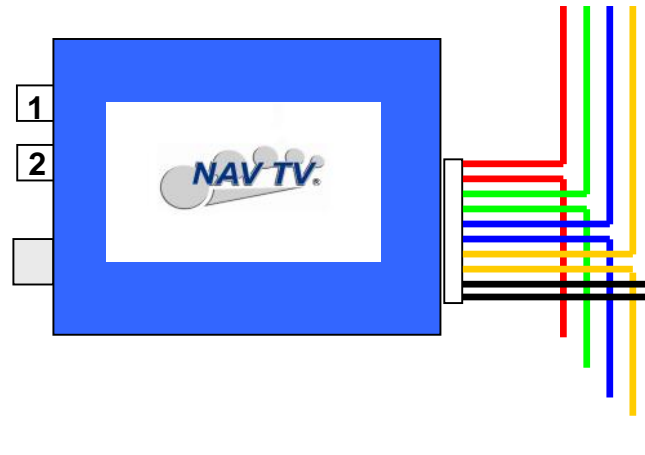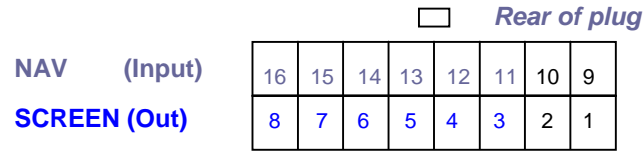


The RGB switch should be set to **RGBS**



## INSTALLATION

All the wires can be accessed at the rear of the Screen unit. The wires are in the 20 way plug

20 WAY PLUG AT REAR OF SCREEN

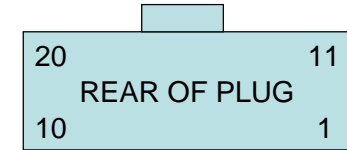

NAV- INHON \_\_\_\_\_ Vehicle Navigation

### DVD ROM 06

RED	White (pin 20)
GREEN	Red (pin 19)
BLUE	Yellow (pin 10)
YELLOW	Black (pin 9)

### CD ROM <06

RED	pin 13
GREEN	pin 12
BLUE	pin 3
YELLOW	pin 2

### Other connections

YELLOW	to 12v+ ignition / acc
BLACK	to 12v- ground
BLUE	to 12v+ to activate VIDEO 2
ORANGE	Cut and add switch for VIDEO 1